


OAKLEY SPLIT THUMP CONTROLS

TURN SPLIT THUMP ON	Press and hold the Play / Pause ► button until the power-up tone is heard.
PAUSE / RESUME PLAYING	Press the Play / Pause ► button for less than one second.
TURN SPLIT THUMP OFF	Press and hold the Play / Pause ► button until the power-down tone is heard. (<i>SPLIT THUMP will turn itself off after three minutes if left in Pause mode</i>)
INCREASE VOLUME LEVEL	Press the Increase Volume ◀▶ button
DECREASE VOLUME LEVEL	Press the Decrease Volume ▶ button
SKIP TO NEXT SONG	Press the Next Song / Fast Forward ►► button
FAST FORWARD WITHIN A SONG	Press and hold the Next Song / Fast Forward ►► button
PLAY PREVIOUS SONG	Press the Previous Song / Rewind ◀◀ button
REWIND WITHIN A SONG	Press and hold the Previous Song / Rewind ◀◀ button
SHUFFLE PLAYBACK ORDER	While pressing and holding the Next Song / Fast Forward ►► button, immediately press the Previous Song / Rewind ◀◀ button once
RESET SPLIT THUMP (FOR TROUBLESHOOTING)	While pressing and holding the Play / Pause ► button, immediately press the Previous Song / Rewind ◀◀ button once
EQUALIZER SETTING	Press the Increase Volume ◀▶ button and the Decrease Volume ▶ button at the same time

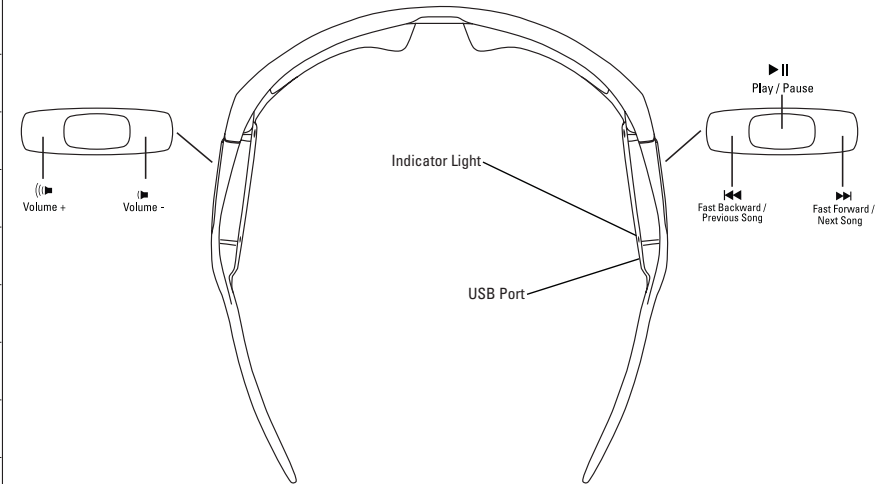

ADVANCED CONTROLS

SKIP FORWARD TO NEXT PLAYLIST (FOLDER).	While in Pause mode...Press the Increase Volume ◀▶ button to move 1 folder forward ...then resume Play.
SKIP BACK TO PREVIOUS PLAYLIST (FOLDER).	While in Pause mode...Press the Decrease Volume ▶ button to move 1 folder back ...then resume Play.
SKIP FORWARD BY 10 SONGS	While in Pause mode...Press the Next Song / Fast Forward ►► button to move 10 songs forward in the playlist...then resume Play.
SKIP BACK BY 10 SONGS	While in Pause mode...Press the Previous Song / Rewind ◀◀ button to move 10 songs back in the playlist...then resume Play.
ACTIVATE OVERDRIVE SONG SELECTION	While pressing and holding the Play / Pause ► button, immediately press the Next Song / Fast Forward ►► button once.

AUDIBLE CONTROLS

NEXT CHAPTER	Press the Next Song / Fast Forward ►► button
PREVIOUS CHAPTER	Press the Previous Song / Rewind ◀◀ button
SKIP TO NEXT SONG	While in Pause mode... Press the Next Song / Fast Forward ►► button to bookmark current location and move to next song. ...then resume Play.
SKIP TO PREVIOUS SONG	While in Pause mode... Press the Previous Song / Rewind ◀◀ button to bookmark current location and move to the previous song. ...then resume Play.

INDICATOR LIGHT

SOLID GREEN	Fully charged.
SOLID AMBER	66% to 34% charged. (Shown during Power-up)
SOLID RED	33% to 0% charged. (Shown during Power-up)
BLINKING GREEN	99% to 67% charged. (Shown during Charging)
BLINKING AMBER	66% to 34% charged. (Shown during Charging)
BLINKING RED	33% to 0% charged (less than 20% of remaining battery).

INDICATOR TONES

THUMP-THUMP	Power-Up and Power-Down tone
HIGH-LOW BEEP	Low-battery tone. Occurs when 20%, or less, of the battery remains.